

COMFORT GRIP HANDLE KIT

INSTALLATION MANUAL

REV. C1



TITAN
POST DRIVERS

X **SERIES**

PART# :
PGDLHKX

PREP

The comfort grip kit can be installed on either the top or bottom of your driver:

- Installing the grip on the **top** gives you another gripping surface when working at or below chest height, and serves as an extra handle when carrying from the top
- Installing the grip on the **bottom** makes driving taller posts more convenient, and allows you to more easily carry the driver sideways
- Two handle kits can be installed to take advantage of both options

When installing the grip on the **bottom** of the driver, it can be installed in either direction:

- Grip towards the front of the driver (preferred by most users)
- Grip towards the engine

The process for installing the handle is the same for each position.

Before installing your handle kit, please verify that your kit contains all parts listed on page 3. If not, please contact the distributor where you purchased your kit.

Video instructions can be found at:
<https://youtu.be/CqwTFTJLKm4>

INSTALL

To install the **COMFORT GRIP HANDLE (#1)** and **KNURLED COUPLERS (#2)**:

First, see Figure 1 and the detailed view for part #3: Put two **LOCK WASHERS (#3)** on each **M10x40mm CAP SCREW (#4)**. The washers should be placed with the deep serrations face-to-face and the fine bumps facing outward.





Figure 1: Proper orientation of lock washers on M10x40mm cap screw

Install two cap screws with lock washers through the handle, into the **deep socket** of the knurled couplers, and into the threads of the main driver handles using an **8mm ALLEN WRENCH (#5)**. Tighten securely.

After initial use, check installed hardware to ensure tightness.

Note: If permanently installing the handle kit on your driver, torque the cap screws to 82 N-m (60.5 ft-lb) to prevent loosening.

PARTS VIEW

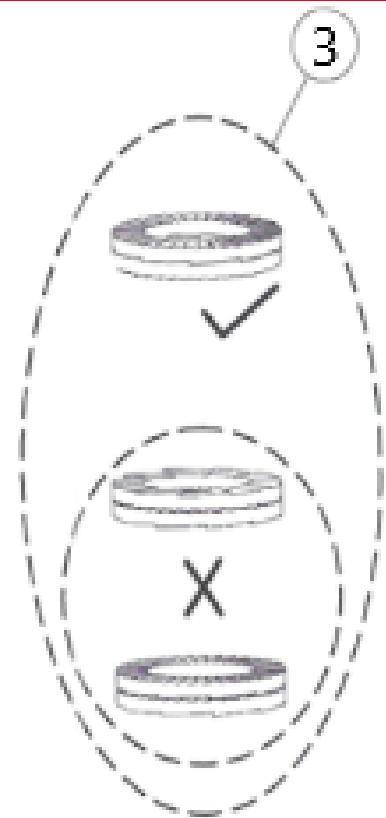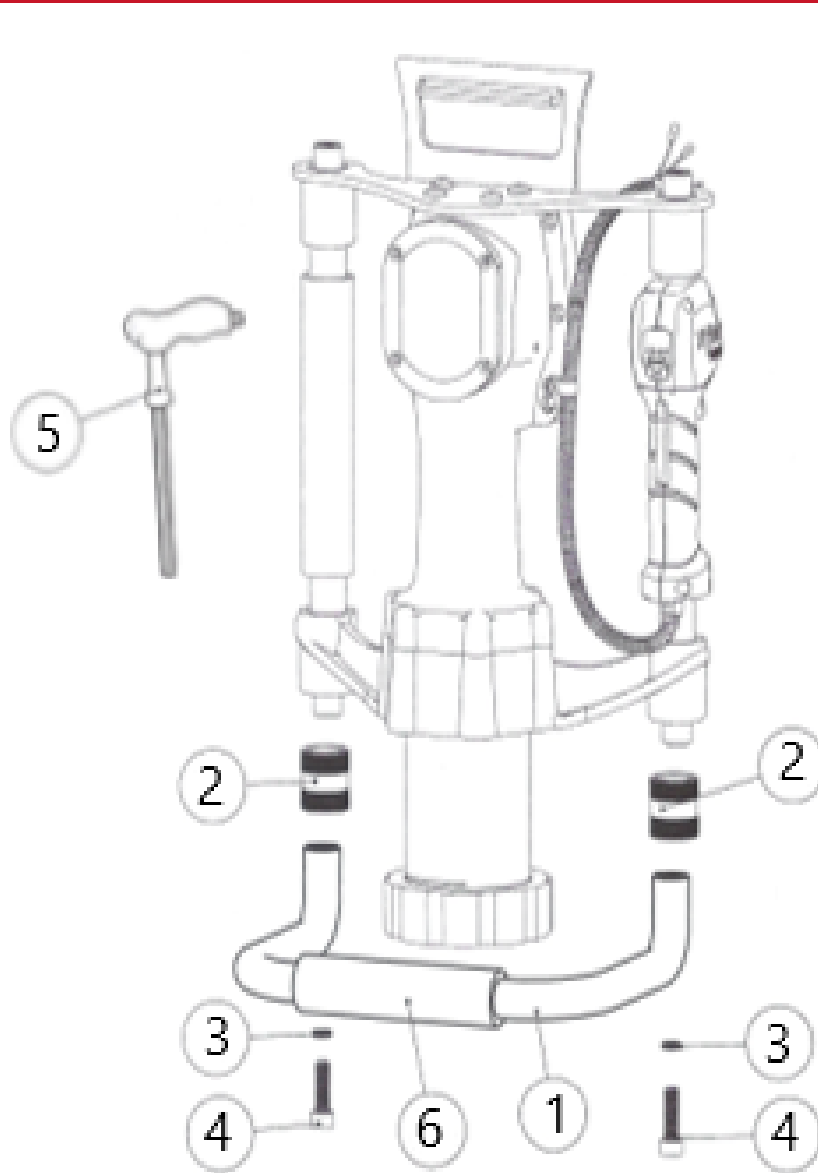

Nordlock Washers

Wide serrations
facing each other

Narrow serrations
facing outward

PGDLHKX Parts List

Key	Part Number	Item Description	Quantity	Note
1	YPGDAHX	Formed Handle with Foam Grip	1	
2	YPGDSCX	Short Coupler	2	
3	YPGDW10	Nordlock Washer, Pack of 2	2	
4	YPGD10X40	Machine Screw, 40mm	2	M10X40 SHCS
5	YPGDT8X	Allen Wrench, 8mm	1	
6	YPGD32	Replacement Handle Foam	1	Sold Separate